


HD MULTIMEDIA KARAOKE

ET28KH QUICK GUIDE

& WARRANTY CARD

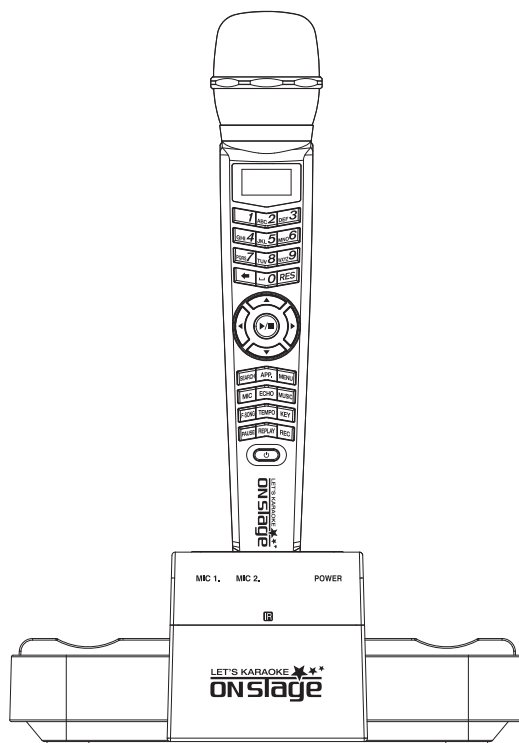

Limited warranty included

- | | | | |
|---------------------------|---------------------------------|---|-------------------------------|
| • Model No. | : ET28KH | • Audio Output Power | : Max 2Vrms |
| • Dimensions | : 6.10" W x 7.87" D x 2.32" H | • Operating Temperature | : 0°C~60°C |
| • Wireless Mic. Bandwidth | : 2.4 GHz | • Power Supply | : AC Adaptor(DC 9V/1.5A) |
| • Weight | : 0.93lbs | • MIC Type | : Digital Wireless Microphone |
| • TV Output | : HD output / Composit | ※ Approximately lasts for 12 hours with 2×AA batteries.
Hours may vary depending on the circumstances. | |
| • Display Resolution | : 1280 x 720(HD), 720 x 480(SD) | | |


LET'S KARAOKE  **ONstage**®

COMPONENTS AND FUNCTIONS	01
HOW TO INSTALL	02
SONG SEARCH, MENU&CONFIGURATION	03
APP(Application), EXTRA FUNCTIONS	04,05
TROUBLESHOOTING	06
LIMITED WARRANTY	07



I Main Device

II 2 Wireless MIC


TOP

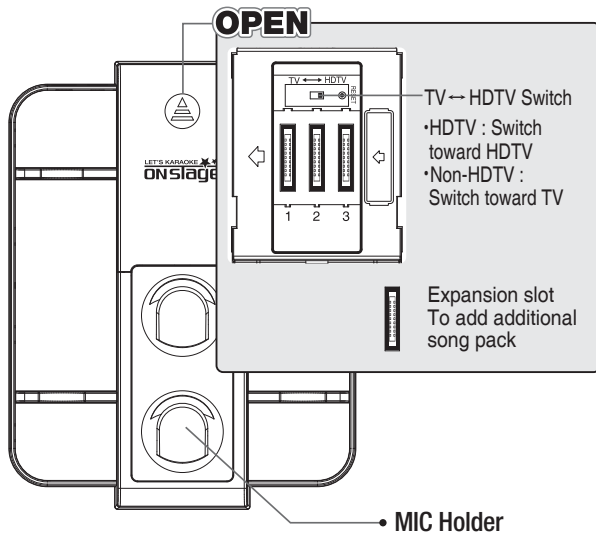


SIDE

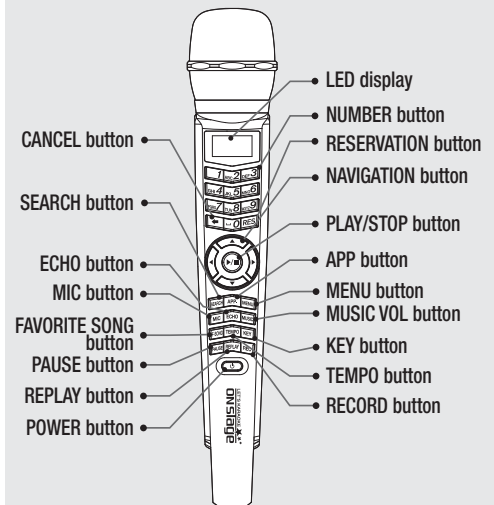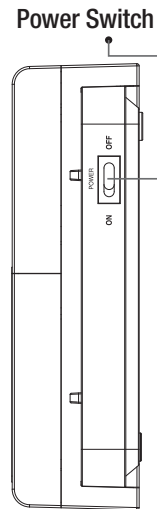


FRONT

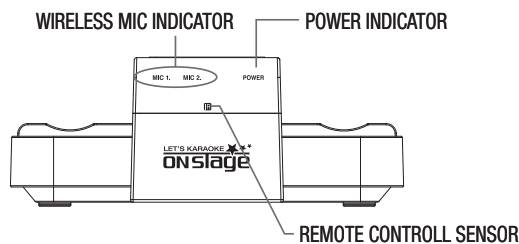

BACK

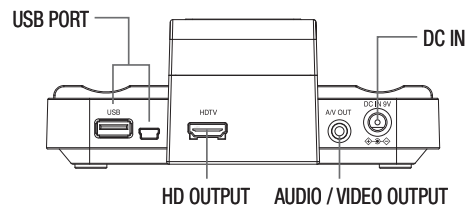


III Remote Control

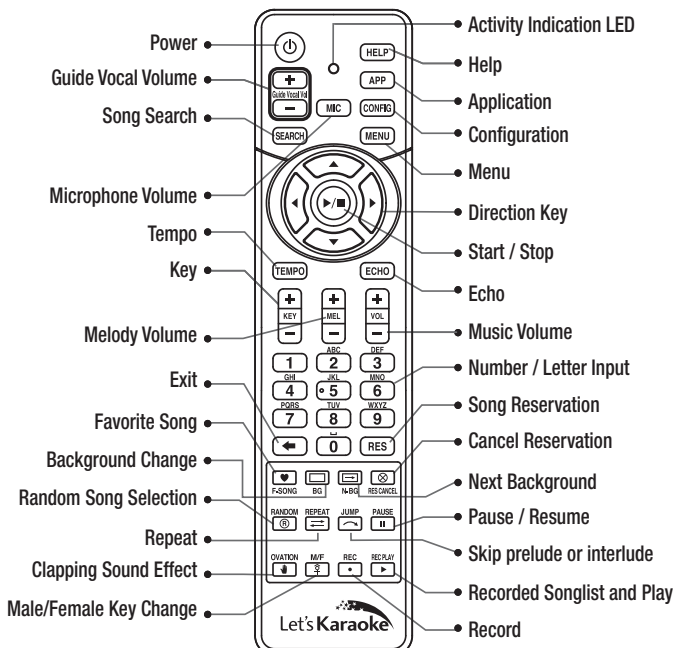



IV Accessories

HD-TV Cable, Tri-color RCA cable, Power adaptor, Quick guide

HD-TV Cable




Tri-color RCA cable

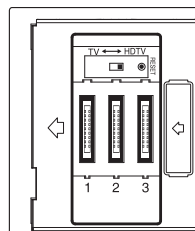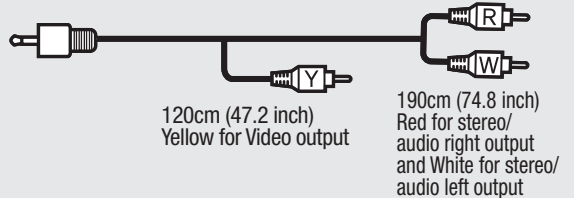

※ To adjust, select the switch located above the song pack slots to HDTV or TV depending on what kind of TV the device will be connected.


1 Connecting to HDTV with multimedia high definition input

HD-TV cable : Connect one end of the cable to the HD output on the back part of the main device and the other end of the cable to the HD socket on your HDTV.

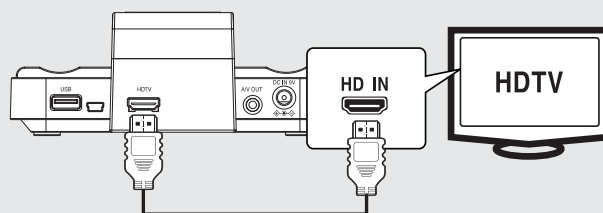


2 Connecting to HDTV and external audio output

For video output, follow the same instruction as 1. above. For audio, use the tri-color RCA cable. Connect the cable to the audio/video output on the back part of the main device and connect Red(right) end and White(left) end of the cable to corresponding audio inputs on speakers or other audio devices.

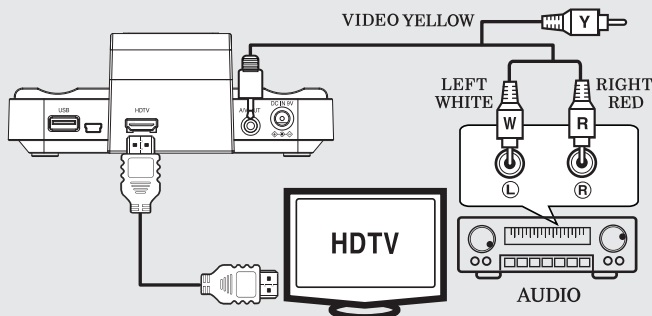


3 Connecting to TV without a multimedia high definition input

Connect the Tri-Color RCA cable from the audio/video output on the back part of the main device to the corresponding audio/video inputs on your TV.

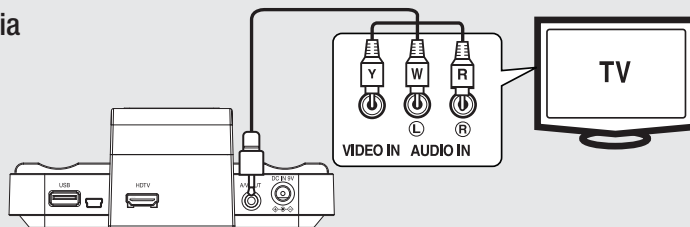

4 Connecting to TV and external audio output

Connect Yellow(Video) end of the cable to the TV video input. Connect Red(right) end and White(left) end of the cable to audio inputs on your audio devices.

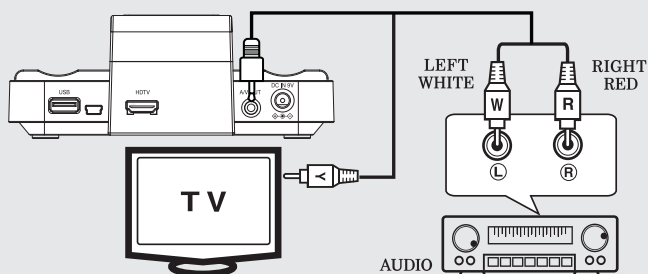


5 How to use digital wireless MIC

Buttons on the MIC will function similarly with the remote controller that is included in the package. Press and hold  for 2 seconds to turn ON or OFF the MIC.

※ If the MIC does not work, please follow below steps.

1. Turn off the MIC.
2. Press "0" button on the wireless MIC, and then press "" button using another finger. (Do not release button "0" and "" until the word "SEL" appears on the LCD of MIC.)

※ MIC turns off automatically, if there is no voice input or other button inputs for 10 minutes.

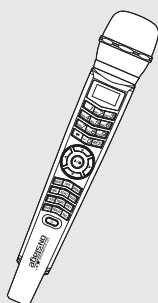

6 How to power on/off

Connect the power adaptor as shown in the picture. Turn on the power switch on the right side of the main device. To turn it off, press  button on the remote controller and turn off the power switch on the right side of the main device.



I Song Search

Button	Letter Input
1	1
2 ABC	A → B → C → 2 → A → Circulate (Press repeatedly.)
3 DEF	D → E → F → 3 → D → Circulate (Press repeatedly.)
4 GHI	G → H → I → 4 → G → Circulate (Press repeatedly.)
5 JKL	J → K → L → 5 → J → Circulate (Press repeatedly.)
6 MNO	M → N → O → 6 → M → Circulate (Press repeatedly.)
7 PQRS	P → Q → R → S → 7 → P → Circulate (Press repeatedly.)
8 TUV	T → U → V → 8 → T → Circulate (Press repeatedly.)
9 WXYZ	W → X → Y → Z → 9 → W → Circulate (Press repeatedly.)
0	↵ → 0 → ↵ Circulate (Press repeatedly)

1. Press **SEARCH** to open the search panel
2. **SEARCH** TITLE → SINGER → LYRIC → NUMBER → TITLE → Circulate
(Press repeatedly.)
3. **MENU** ALL → GUIDE VOCAL → Listing by Country → ALL → Circulate
(Press repeatedly.)
4. **CONFIG** Alphabet → Other Languages Available → Alphabet → Circulate
(Press repeatedly.)
5. Press to move the cursor to the right (or after 2 seconds the cursor will move to the right without pressing).
6. Press to delete the letter.
7. Press to select a song.
8. Press to play (resume) / stop.
9. Press to pause / resume.

II MENU Press **MENU** → Press to move to the menu you want to use → Press or to select that menu → Press to select the content and/or adjust the value → Press or to save → Press to exit from the menu.

 MELODY VOL Adjust melody volume	 MUSIC VOL Adjust music volume	 TEMPO Adjust tempo	 KEY Adjust key	 MUSICAL NOTE Turn on/off the musical note	 OCTAVE Adjust octave	 ECHO Adjust echo	 MIC VOL Adjust MIC volume
 GUIDE VOCAL VOL Adjust volume of guide vocal	 VOCAL ASSIST Turn on/off guide vocal	 INSTRUMENT Change melody instrument	 M/F Change male/female key	 REPEAT Set a part of song to be repeated	 CONTINUE Play songs continuously	 SCORE Change settings for score	 BACK GROUND Change background

III CONFIGURATION Press **CONFIG** or **APP** to open a page for .

 ECHO EFFECT
 SMART ECHO
 COUNTDOWN MARK
 MUSICAL NOTE SCROLL BAR
 LYRICS
 LYRICS POSITION
 LYRICS LINE
 SCORE CHECK
 REAL TIME SCORE
 SILENCE MODE
 AUTO POWER OFF
 FACTORY RESET

- **[ECHO EFFECT]** Select long, longer, room or hall.
- **[SMART ECHO]** Automatically uses the MIC effect (Echo) only when you start a song.
- **[COUNTDOWN MARK]** Turn on/off the song countdown “4, 3, 2, 1” which indicates the starting point of a song.
- **[MUSICAL NOTE SCROLL BAR]** Turn on/off the musical note scroll bar which indicates where it is playing.
- **[LYRICS]** Turn on/off lyrics on the screen.
- **[LYRICS POSITION]** Select position of the lyrics on the screen.
- **[LYRICS LINE]** Choose the number of lines to be displayed in 2 LINES or 3 LINES.
- **[SCORE CHECK]** Set the scoring mode to None, Beginner, Amateur or Professional.
- **[REAL TIME SCORE]** Turn on/ off the Real time score on the screen.
- **[SILENCE MODE]** Set the silence mode to OFF to Level 1 to Level 2.
- **[AUTO POWER OFF]** Set the Auto power off when there is no input signal.
- **[FACTORY RESET]** Reset all settings to the factory default settings.

I APP (Application)

MOVIE

Turn the power off → (USB PORT) Insert the USB memory device → Turn the power on → **APP** →
 Select → Open the screen → Select a folder or file → Open the selected folder or the file.

MUSIC

Turn the power off → (USB PORT) Insert the USB memory device → Turn the power on → **APP** →
 Select → Open the screen → Select a folder or file → Open the selected folder or the file.

PHOTO

Turn the power off → (USB PORT) Insert the USB memory device → Turn the power on → **APP** →
 Select → Open the screen → Select a folder or file → Open the selected folder or the file.

CDG Karaoke

Turn the power off → (USB PORT) Insert the USB memory device → Turn the power on → **APP** →
 Select → Open the screen → Select a folder or file → Open the selected folder or the file.

SERIAL NUMBER

The serial number stored in your USB memory device is needed when purchasing any additional songs from the website www.netkara.com.

Turn the power off → (USB PORT) Insert the USB memory device → Turn the power on → **APP** →
 Select → Open the screen → Save the Serial Number in the USB memory device → Check if it is successfully saved. → Exit.

USB CONTENTS

Turn the power off → (USB PORT) Insert the USB memory device → Turn the power on → **APP** →
 Select → Open the screen → The main device will automatically find additional songs on USB memory device and move them to the internal memory inside the main device.

GAME

APP → Select → Open the screen → Select a game → Start the game.

MANUAL

APP → Select → Open the screen → View the next page, View the previous page → Exit.

II Extra Functions

HELP View help menu

If you want to know the detailed explanation for a specific function of each key button on remote controller, please press the key button you want, which leads you to the corresponding page of the manual in Help menu.

Reserving songs

On the search panel → Select a song
→ Reserve a song.

Cancelling reserved Song

In the RESERVED SONG LIST → Select a song
→ Cancel the reservation.

Add to the Favorite Song List

- 1) On the search panel → Select a song → Add a song to the favorite song list.
- 2) While playing a song → Add a song to the favorite song list.

Delete from the Favorite Song List

While on the standby, press to move to the FAVORITE SONG LIST → Select a song → Delete the song.

Background

Choose background setting from MOVIE, PHOTO or AUTO.

Next Background

View next background in order.

Skip

Skip prelude or interlude.

Clap

Play clapping sound effect.

Record

- 1) On the search panel → Select a song → Start recording → or End recording.
- 2) On the FAVORITE SONG LIST → Select a song → Start recording → or End recording.
- 3) On the RESERVED SONG LIST → Select a song → Start recording → or End recording.
- 4) While playing a song → Start recording → or End recording.

Copy recorded songs to USB Memory device

Turn off the main device → (USB PORT) Insert the USB memory device → Turn the main device on → Display the RECORDED SONG LIST → Select a song → Copy a recorded song to your USB Memory device.

Delete a recorded song

On the RECORDED SONG LIST → Select a song → Delete the recorded song.

Section move

While playing a song → to pause the song → to move to the previous lyrics to move to the next lyrics
 to move to the previous page and to move to the next page → or to play the song again

PRECAUTION



Use the adaptor that comes with **ONSTAGE** only. There are many adaptors that may fit into **ONSTAGE**, but have different electrical specifications. These adaptors would work only for a short period of time but would soon damage **ONSTAGE**.



Do not plug **ONSTAGE** in if it is wet. Please contact the service center immediately, if the device has been used in wet condition. If any solid object or liquid gets inside of **ONSTAGE**, unplug it and have it checked by the service center.



Do not drop **ONSTAGE**. Any external or internal damage due to dropping is not covered by the warranty.



Do not insert or remove additional packs, total pack and USB memory device while **ONSTAGE** is turned on.



Do not store **ONSTAGE** in direct sunlight, in a high temperature, or a highly humid area.



Do not use strong chemicals to clean **ONSTAGE**, as these chemicals may damage the device. Keep **ONSTAGE** away from pets and small children.



Do not press the LED/LCD part



Never use a sharp object on the keypad.



Do not immerse **ONSTAGE** in water or splash water on it. Water damage is not covered by the warranty.



Do not disassemble **ONSTAGE**. This will void the warranty.

TROUBLESHOOTING

In cases of problems, please check the following recommendations before contacting the service center.

● If **ONSTAGE** will not be turned on

MAIN DEVICE : Make sure the adaptor is correctly plugged into the power outlet.
Check if the plug is properly inserted to the corresponding jack.
Check if the battery type is AA.
If the battery is low, **ONSTAGE** wireless MIC may not work properly.

● If the user's voice cannot be heard

Press the VOL button and check the MIC volume of **ONSTAGE**.
Press "0" button on the wireless MIC, and then press "POWER" button using another finger to turn on the power.(Do not release button "0" and "POWER" until the word "SEL" appears on the LCD of MIC.)

● If the TV does not show pictures or emit sound

Make sure HD cable and/or A.V cables are properly connected between **ONSTAGE** and HDTV(SDTV). Check if the input setting of HDTV(SDTV) corresponds to the external input of your TV to which the cables are connected.

● The display screen of **ONSTAGE** has frozen or disappeared from TV screen

Press the power button off and turn it back on.

※ When **ONSTAGE** needs to be repaired, please send it to your nearest service center or the place you purchased it from.

ENTER TECH CO., LTD.

VER.101

Address : Enter B/D, 156-7, Ojeong-dong, Ojeong-gu,
Bucheon-City, Kyonggi-do, Korea (421-814)

Tel : +82-32-680-9000 | Fax : +82-32-673-0818

Web address : www.enter-tech.com



PRODUCT NAME : ONSTAGE
MODEL NUMBER : ET28KH / FCC : PBN-ET28KH

This device complies with part 15 of the FCC Rules.
Operation is subject to the following two conditions :

- (1) This device may not cause harmful interference, and
- (2) This device must accept any interference received, including interference that may cause undesired operation.

Any changes or modifications to the equipment not expressly approved by the responsible for compliance could void user's authority to operate the equipment.



ENTER-TECH 1 YEAR LIMITED WARRANTY



Thank you for purchasing Enter Tech's product.

ET warrants its products against defects in materials and workmanship under generally accepted industry standards for a period of one (1) year for labor and parts from the date of retail purchase. ET's warranty obligations are limited to the terms and conditions set forth below :

TERMS AND CONDITIONS

1. If a defect or defects exist, at its option. ET will repair the product at no charge, using new or refurbished replacement parts provided the product does not fall into one of the categories of Section Number 9. "The warranty does not cover as below:" Replacement parts are warranted for the balance of the original applicable warranty period.
2. To obtain warranty protection, notice of the alleged defects must be given promptly upon discovery and this warranty card bearing the date of purchase, the product's model number with its serial number and other fill-ins must be presented with dated proof of purchase (Tax invoice / receipt) to one of our authorized service centers.
3. Our decision on all questions with respect to complaints as a result of defects, either materials or workmanship, shall be conclusive.
4. In order to ensure that you are covered by the warranty, you should use only genuine ET parts and components provided, such as adaptors and cables.
5. Enter-tech or Authorized Service Centers will repair products under warranty at no charge, given all guidelines and restrictions are followed. Shipping expenses may or may not apply to customer depending on the region. Please contact local service center before sending any units in for repair.
6. After warranty period, to have normal service, customers shall bear all costs in shipping the product(s) for both ways (Customers to service centers and Service centers to customers).
7. All of returned products must be packaged appropriately, and it is recommended that they be insured or sent by a method that provides for tracking of the package. The recipient (service center(s) or even ET) is not responsible for any product that is lost or damaged in transit.
8. Warranty is void when the product is purchased outside the country where it is being claimed. All shipping costs for both ways shall be borne by the customer (e.g. If purchased in the USA, only authorized USA service will honor the warranty)
9. The warranty does not cover as below :
 - 1) Defects, damage and breakage resulting from accidents, misuse (breakage, spillage of food / liquid substances that defect the product and parts such as P.C.B, battery leakage and etc.), wrong usage of electrical supply and voltage, abuse, alternation, modification,
 - 2) improper testing(operation, installation), tampering or failure of the purchaser to follow normal operating procedures described in the user's manual.
 - 3) Products that were disassembled and/or repaired by unauthorized agent while still covered by the warranty time frame of one year affect the performance of the product.
 - 4) Scratches and damages to the outer surface areas and externally exposed parts that are due to normal customer use.
 - 5) Claims for damaged/missing parts of accessories three (3) days after receiving the goods.
 - 6) Product which has its serial number removed or altered or made illegible / tampered.
 - 7) If the warranty card is being altered, defaced or erased in any manner whatsoever.
10. Accessories in the product package provided by ET such as adaptors, cables which are considered as consumable articles.
The warranty period for a voice coil inside the mic ball of a mic is 6 months from the date of a retail purchase.

Any service charge due to the clauses of "The warranty does not cover" will be billed to customers and the service charge will vary depending on each service center in each country. Please consult the service charge with your nearest service center.

If you want to contact our technical "Service Center" close to your area, please refer to our website at " www.enter-tech.com ".

LIMITED WARRANTY

PRODUCT		CITY / STATE / ZIP	
MODEL NUMBER		TELEPHONE	
WARRANTY PERIOD	1 YEAR FROM DATE PURCHASE	DATE PURCHASE DAY / MONTH / YEAR	
PURCHASER'S NAME		PURCHASED FROM	
ADDRESS		REASON FOR SERVICE	